

(合計) 526

対応端末 docomo(新シリーズ)

2017/6/13現在

計 223 機種

F-01B	F-01H(arrows Fit)	F-01E	P-01G	SH-01C	SH-02H	
F-01C	F-01J(arrows NX)	N-01B	P-01B	SH-02C	SH-03H	SC-01G(GALAXY Note Edge)
F-02B	F-04F(ビジネススマートフォン)	N-01C	P-01C	SH-04C	SH-04H(AQUOS ZETA)	SC-04G(GALAXY S6 edge)
F-02C	F-05F(ARROWS NX)	N-01G	P-02B	SH-05C	SH-01J(AQUOS PHONE)	SC-05G(GALAXY S6)
F-02D	F-07F	N-02B	P-02C	SH-06C	SH-02J(AQUOS EVER)	CA-01C(EXILIMケータイ)
F-02J	F-08F(らくらくホン8)	N-02C	P-03B	SH-07B	SO-01G(Xperia Z3)	T-01D(REGZA Phone)
F-03B	F-01G(らくらくホンベーシック4)	N-03C	P-03C	SH-09C	SO-02C	T-02D(REGZA Phone)
F-03C	F-04G	N-03D	P-04B	SH-08C	SO-02G(Xperia Z3 compact)	d-01H(dtab d-01H)
F-04B	F-05G	N-04B	P-05B	SH-10C	SO-01C	HW-01E(Ascend)
F-04C	SC-01C	N-05B	P-06B	SH-11C	SO-03C(Xperia ray)	HW-03E(Ascend D2)
F-05C	SC-02B	N-07B	P-07B	SH-13C	SO-03D(Xperia acro HD)	d-02H(dtab Compact)
F-06B	SC-02C	N-07E	P-04C	SH-12C	SO-02D(Xperia NX)	d-01J(dtab Compact)
F-07B	SC-04D(GALAXY NEXUS)	N-08B	P-05C(LUMIX Phone)	SH-13C	SO-02H	DM-01H(Disney Mobile)
F-08B	SC-06D(GALAXY S III)	N-05C	P-06C	SH-03D	SO-04D(Xperia GX)	DM-02H(Disney Mobile)
F-10B	SC-02E(GALAXY Note II)	N-06C	P-07C	SH-05D	SO-05D(Xperia SX)	DM-01J(Disney Mobile)
F-10C	SC-03E(GALAXY S III α)	N-04C	P-03D	SH-01D(AQUOS PHONE)	SO-01E(Xperia AX)	MO-01J
F-09C	SC-04E(GALAXY S4)	N-02D		SH-02D(AQUOS PHONE slider)	SO-02E(Xperia Z)	
F-11C	SC-02F(GALAXY J)	N-03D		SH-04D(Q-pot.Phone)	SO-04E(Xperia A)	
F-12C	SC-04F(GALAXY S5)	N-01D(MEDIAS PP)		SH-06D(AQUOS PHONE)	SO-04EM(Xperia feat.HATSUNE MIKU)	
F-04D	SC-02G(GALAXY S5 ACTIVE)	N-04D(MEDIAS LTE)		SH-07D(AQUOS PHONE st)	SO-01F(Xperia Z1)	
F-06D		N-05D(MEDIAS ES)		SH-09D(AQUOS PHONE ZETA)	SO-01H	
F-05D(ARROWS X LTE)		N-07D(MEDIAS X)		SH-10D(AQUOS PHONE sv)	SO-03F(Xperia Z2)	
F-03D(ARROWS Kiss)		N-01E		SH-01E(AQUOS PHONE si)	SO-04F(Xperia A2)	
F-08D(Disney Mobile on docomo)		N-02E(MEDIAS U)		SH-01G(AQUOS ZETA)	SO-03G	
F-09E(らくらくスマートフォンプレミアム)		N-03E(Disney mobile on docomo)		SH-02G(Disney Mobile on docomo SH-02G)	SO-03H	
F-12D(らくらくスマートフォン)		N-04E(MEDIAS X)		SH-01E(Vivienne Westwood)	SO-04G	
F-08E(らくらくスマートフォン2)		N-05E(MEDIAS W)		SH-01H	SO-04H	
F-06F(らくらくスマートフォン3)		N-06E(MEDIAS X)		SH-03E	SO-05G(Xperia Z4 Tablet)	
F-04J(らくらくスマートフォン4)		N-01F		SH-02E(AQUOS PHONE ZETA)	SO-01J(XperiaTM XZ)	
F-07E(Disney Mobile on docomo)				SH-05E(スマートフォン for ジュニア)	SO-02J(XperiaTM X Compact)	
F-07D(ARROWS μ)		P-02D(LUMIX Phone)		SH-04E(AQUOS PHONE EX)	L-01F(G2)	
F-10D(ARROWS X)		P-01D		SH-06E(AQUOS PHONE ZETA)	L-07C	
F-11D(ARROWS Me)		P-04D		SH-07E(AQUOS PHONE si)	L-06C	
F-04E(ARROWS V)		P-05D(Disney Mobile on docomo)		SH-01F(AQUOS PHONE ZETA)	L-01D(Optimus LTE)	
F-03E(ARROWS Kiss)		P-06D(ELUGA V)		SH-03F(スマートフォン for ジュニア2)	L-02D(PRADA phone)	
F-02E(ARROWS X)		P-07D(ELUGA power)		SH-02F(AQUOS PHONE EX)	L-05D(Optimus it)	
F-02G(ARROWS NX)		P-01E		SH-04F(AQUOS ZETA)	L-06D(Optimus Vu)	
F-02H		P-02E(ELUGA X)		SH-05F(Disney Mobile on docomo)	L-01E(Optimus G)	
F-06E(ARROWS NX)		P-03E(ELUGA P)		SH-07F	L-02E(Optimus LIFE)	
F-09D(ANTEPRIMA)		P-01F		SH-03G	L-04E(Optimus G Pro)	
F-01F(ARROWS NX)		P-01H		SH-04G	L-05E(Optimus it)	
F-03F(Disney Mobile on docomo)		P-01J(P-smart ケータイ)		SH-05G(AQUOS PAD)	DM-01G	
F-03H(arrows SV)				SH-06G	SC-01H	

F-04H(arrows Tab)

SC-02H

対応端末 docomo(旧シリーズ)

2017/6/13現在

計 3 機種

F702iD
F703i
F706i

対応端末 au(新シリーズ)

2017/6/13現在

計 169 機種

CA003	KYY21(URBANO L01)	SH001	T001	SCL21(GALAXY SIII Progre)
CA004	KYY06(GRATINA)	SH002	T002	SCL23(GALAXY S5)
CA005	KYY22(URBANO L02)	SH003	T003	ISW11HT
CA006	KYY24(TORQUE G01)	SH004	T004	ISW12HT(htc EVO 3D)
CAY01	ISW13HT(HTC J)	SH005	T005	SCV31(GALAXY S6 edge)
CA007	SA001	SH006	T006	SCL24(GALAXY Note Edge)
CAL21(G'zOne TYPE-L)	SA002	SH007	TSX06	SCV32(GALAXY A8 SCV32)
IS11CA	E10K	SH008	T008	SCV35(Galaxy S8+ SCV35)
IS11N(MEDIAS BR)	SHV31(AQUOS SERIE mini)	SH009	T007	SCV36(Galaxy S8 SCV36)
K002	S001	SH010	TSX04	PT002
K006	S002	SH011	TSX05	IS11PT(MIRACH)
K007	S003	SHY01	TSY01	NS02
K009	S004	IS12SH		PT003
K011	S005	IS11SH	IS11T	PTL21(VEGA)
KYX02	S006(Cyber-shotケータイ)	A01	ISW11F(ARROWS Z)	E09F
KYX03	S007	IS05	IS12F(ARROWS ES)	F001
KYX04	SOX01	IS14SH(AQUOS PHONE)		H001
KYY09(MARVERA2)	SOY01	IS13SH(AQUOS PHONE)	FJL21(ARROWS ef)	HIY01
KYY10(GRATINA2)	SOY02	C01(INFOBAR)	FJL22(ARROWS Z)	HIY02
KYV31(URBANO V01)	SOY03	ISW16SH(AQUOS PHONE SERIE)	ISW11M(MOTOROLA PHOTO)	P001
KYV32(BASIO)	SOY04	IS15SH(AQUOS PHONE SL)	IS12M(MOTOROLA RAZR)	
ISW11K(DIGNO)	SOY05	ISW17SH(AQUOS PHONE CL)	IS11LG(optimus X)	
KYV33(INFOBAR)	SOX02	SHL21(AQUOS PHONE SERIE)	LGL21(Optimus G)	KYT31(Qua tab 01)
KYV34(URBANO V02)	IS11S	SHL22(AQUOS PHONE SERIE)	LGL22(isai)	KYV36
KYV35(TORQUE G02)	IS12S(Xperia acro HD)	SHL23(AQUOS PHONE SERIE)	LGL23(G Flex)	
KYF33(TORQUE X01)	SOL21(Xperia VL)	SHL24(AQUOS PHONE SERIE mini)	LGL24(isai FL)	HWT31(Qua tab 02)
KYV38(URBANO V03)	SOL22(Xperia UL)	SHL25(AQUOS SERIE)	LGV31(isai VL)	KYV37(Qua phone)
KYV40(rafre)	SOL23(Xperia Z1)	SHF31(AQUOS K)	ISW11SC(GALAXY SII WiMAX)	Qua phone PX
KYL21(DIGNO S)	SOL24(Xperia Z Ultra)	SHF32(AQUOS K)	LGV32	KYF31(GRATINA 4G)
KYL22(DIGNO M)	SOL25(Xperia ZL2)	SHF33(AQUOS K)	LGV34	KYF34(GRATINA 4G)
KYL23(miraie)	SOL26(Xperia Z3)	SHV32		KYF32(かんたんケータイ)
HTL21(HTC J butterfly)	SOV31	SHV33(AQUOS SERIE mini)		PX(Qua tab)
HTL22(HTC J One)	SOV32	SHV34(AQUOS SERIE)		PZ(Qua tab)
HTL23(HTC J butterfly)	SOV33	SHV35(AQUOS U)		miraie f
HTV31	SOV34(Xperia TM XZ)	SHV36(BASIO2)		
HTV32(HTC 10)	SOV35(Xperia TM XZs)	SHV37(AQUOS U)		
	SOT31(Xperia Z4 Tablet)	SHV38(SERIE mini)		

対応端末 au(旧シリーズ)

2017/6/13現在

計 7 機種

W63CA
W63SH
W64S

E05SH
E06SH
E07K
E08T

対応端末 SoftBank・Disney

2017/6/13現在

計 112 機種

841SH	DM013SH	942P	840N
841SHs	200SH(PANTONE 6)	001P(LUMIX Phone)	841N
842SH	202SH(PANTONE WATERPROOF)	002P for Biz	001N
944SH	203SH(AQUOS PHONE Xx)	002P	101N(MEDIAS CH)
945SH	DM014SH	003P	
001SH	DM015K	101P(LUMIX Phone)	iPod touch
002SH	204SH(シンプルスマホ)	102P	iPad
004SH(THE PREMIUM7 WATERPROOF)	206SH(AQUOS PHONE Xx)	103P(COLOR LIFE 3)	iPhone
DM006SH	302SH(AQUOS PHONE Xx)	301P(COLOR LIFE 4 WATERPROOF)	
DM007SH	205SH(AQUOS PHONE ss)	COLOR LIFE 5 WATERPROOF	201M(RAZR M)
DM008SH	301SH(THE PREMIUM 10 WATERPROOF)	6P(Nexus)	
DM009SH	DM016SH		101F (ARROWS A)
DM010SH	303SH(AQUOS PHONE Xx mini)	401SH(シンプルスマホ2)	201F(ARROWS A)
DM011SH	304SH(AQUOS Xx)	401SO(Xperia Z3)	202F(ARROWS A)
DM012SH(Disney)	305SH(AQUOS CRYSTAL)	402SH(AQUOS CRYSTAL X)	301F(ARROWS A)
007SH		402SO	
007SH J	007HW (Vision)	Performance(Xperia X)	AQUOS CRYSTAL 2
007SH KT	201HW(STREAM)		AQUOS Xx
006SH		840SC	
005SH	101K(HONEY BEE)	001SC	GALAPAGOS
003SH	201K(HONEY BEE)	404SC	Xperia TM XZ
009SH Y (Yahoo! Phone)	202K(DIGNO R)		Xperia XZs
101SH (AQUOS PHONE THE HYBRID)	404KC(DIGNO U)		
102SH (AQUOS PHONE)	503KC	001HT	501LV
103SH (AQUOS PHONE)	501SO		601LV(Lenovo TAB3)
105SH (PANTONE 4)	501KC(DIGNOケータイ)	003Z	602LV(Lenovo TAB3)
104SH (AQUOS PHONE)	502KC(DIGNOケータイ)	008Z (シンプルスマートフォン)	
106SH(AQUOS PHONE Xx)	for Biz(DIGNOケータイ)	009Z (STAR 7)	
107SH (PANTONE 5)		302ZT(かんたん携帯8)	
		505SH(かんたん携帯9)	
107SH B(ボス電)	503SH(AQUOS Xx2 mini 503SH)	001DL	
109SH(THE PREMIUM9 WATERPROOF)		101DL (DELL Streak Pro)	
SW001SH(STAR WARS mobile)	504SH		
601SH(AQUOS ケータイ2)	506SH	Xx3 (AQUOS mini)	
602SH(AQUOS ケータイ2)	509SH		

対応端末 Y!mobile

2017/6/13現在

計 12 機種

S41HW
S42HW
S51SE (Sony Ericsson mini)

GS02
GS01 (Dell Streak Pro)
GS03

GL07S(STREAM X)
EM01F (ARROWS S)

507SH (Android One)
Android One S1
Android One S2
MediaPad T2 Pro 606HW

(合計) 315

SHA-2非対応端末 docomo(新シリーズ)

2015/10/17現在
計 61 機種

F-01A	SH-01A
F-02A	SH-01B
F-03A	SH-02A
F-04A	SH-02B
F-06A	SH-03A
F-07A	SH-03B
F-08A	SH-04A
F-09A	SH-04B
F-09B	SH-05A
F-10A	SH-05B
	SH-06A
N-01A	SH-06B
N-02A	SH-07A
N-03A	SH-08A
N-03B	SH-08B
N-04A	SH-09B
N-05A	SH-03C
N-06A	
N-06B	
N-07A	
N-08A	L-01A
N-09A	L-01B
	L-01C
P-01A	L-02B
P-02A	L-03A
P-03A	L-03B
P-04A	L-03C
P-05A	L-04A
P-06A	L-04B
P-07A	L-06A
P-08A	L-10C
P-09A	L-04C
P-10A	T-01C

SHA-2非対応端末 docomo(旧シリーズ)

2015/10/17現在

計 87 機種

F704i	N601i	SO906i
F705i	N702iD	SO905iCS
F902i	N702iS	SO905i
F902iS	N703iD	SO903iTV
F903i	N703iomyu	SO903i
F903iBSC	N704iomyu	SO902iWP+
F903iX	N705i	SO902i
F904i	N705iomyu	SO706i
F905i	N706i	SO705i
F905iBiz	N706iII	SO704i
F906i	N706ie	SO703i
	N902i	SO702i
D702i	N902iL	SA702i
D702iBCL	N902iS	
D702iF	N902iX	P702i
D703i	N903i	P702iD
D704i	N904i	P703i
D705i	N905i	P703iomyu
D705iomyu	N905iBiz	P704i
D800iDS	N905iomyu	P704iomyu
D851iWM	N906i	P705i
D902i	N906iL	P705iCL
D902iS	N906iomyu	P705iomyu
D903i		P706ie
D903iTV	L704i	P706iomyu
D904i	L705i	P902i
D905i	L705iX	P902iS
	L706ie	P903i
	L852i	P903iTV
		P903iX
		P904i
		P905i
		P905iTV
		P906i

SHA-2非対応端末 au(新シリーズ)

2015/10/17現在

計 4 機種

IS01
IS03
IS04
IS06

SHA-2非対応端末 au(旧シリーズ)

2015/10/17現在

計 48 機種

W46T	W62CA
W47T	W62H
W52CA	W62K
W52H	W62P
W52S	W62S
W52SA	W62SA
W52SH	W62SH
W53CA	W62T
W53H	W63H
W53S	W63K
W53SA	W63K
W53T	W63S
W54S	W63SA
W54SA	W63T
W54T	W64K/W53K
W55SA	W64SA
W55T	W64SH
W56T	W64T
W61CA	W65K
W61H	W65S
W61K	W65T
W61P	
W61PT	
W61S	
W61SA	
W61SH	
W61T	

SHA-2非対応端末 SoftBank・Disney

2015/10/17現在

計 113 機種

810SH	934SH	705P	811T	705SC	X06HT
811SH	935SH	706P	813T	706SC	830CA
812SH	936SH	810P	814T	707SC	930CA
812SHs	940SH	820P	815T	707SCII	705N
813SH	941SH	821P	822T	708SC	706N
813SH for Biz	942SH	822P	823T	709SC	820N
814SH	943SH	823P	824T	731SC	821N
815SH	DM001SH	824P	830T	740SC	830N
816SH	DM002SH	830P	831T	805SC	831N
820SH	DM003SH	831P	910T	820SC	930N
821SH	DM004SH	832P	911T	821SC	931N
822SH	DM005SH	840P	912T	830SC	940N
823SH		840P for Biz	920T	920SC	
824SH		840P Premium	921T	930SC	
825SH		841P		931SC	
830SH		842P		940SC	
830SH Premium		920P		941SC	
830SH for Biz		921P			
830SHs		930P			
831SH		931P			
831SHs		940P			
832SH		941P			
832SHs					
840SH					
910SH					
911SH					
912SH					
913SH					
920SH					
921SH					
922SH					
923SH					
930SH					
931SH					
932SH					
933SH					

SHA-2非対応端末 Y!mobile

2015/10/17現在
計 2 機種

S31HT
S31HW